
Extreme Condition Curb Mounting Kit MAYEXMK001A For Mounting on Full Perimeter Curbs



WARNING: HAZARDOUS VOLTAGE - DISCONNECT POWER BEFORE SERVICING

ALL phases of this installation must comply with NATIONAL, STATE, AND LOCAL CODES

IMPORTANT - This Document is **customer property** and is to remain with this unit. Please return to service information pack upon completion of work.

KIT CONTENTS:

Bracket - Qty 8

Self drilling #12-3/4 Screws - Qty 48

INSPECTION:

Check carefully for any shipping damage. This must be reported to and claims made against the transportation company immediately. Any missing parts should be reported to your supplier at once and replaced with authorized parts only.

INSTALLATION with MAYCURB001A Only:

1. Prior to setting the packaged unit onto the curb, attach the eight (8) brackets to the curb flange. There will be three (3) brackets on each of the long sides of the unit and one (1) bracket on each of the short sides of the unit. Each bracket will require three (3) of the #12 x 3/4" self drilling screws supplied in the kit and attach to the curb flange as shown in Figures 1 and 2.
2. Place the packaged unit on top of the curb. Using three (3) additional #12 x 3/4" self drilling screws per bracket, attach the brackets to the unit base rail.

Figure 1. MAYEXMK001A Installation
Unit Mounted To Full Perimeter Curb
(MAYCURB)

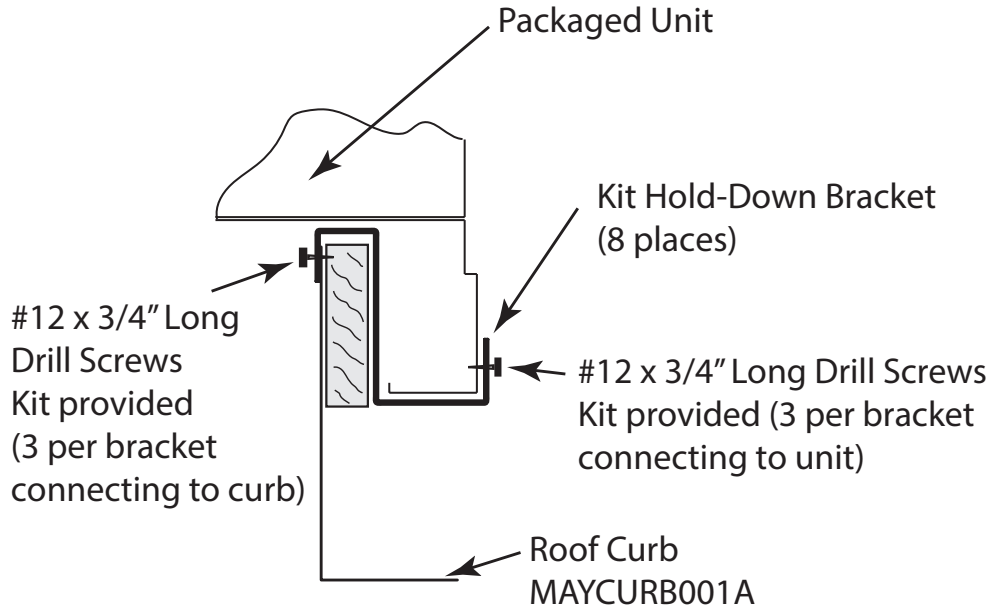


Figure 2. MAYEXMK001A Bracket Locations
3 brackets on each of the long sides. 1 bracket on each of the short sides
(To be located as shown)

